



Instructions for resetting the: Artisan 700, TX700W, PX700W


Start the AdjProg program to get this screen.
Click “Accept”

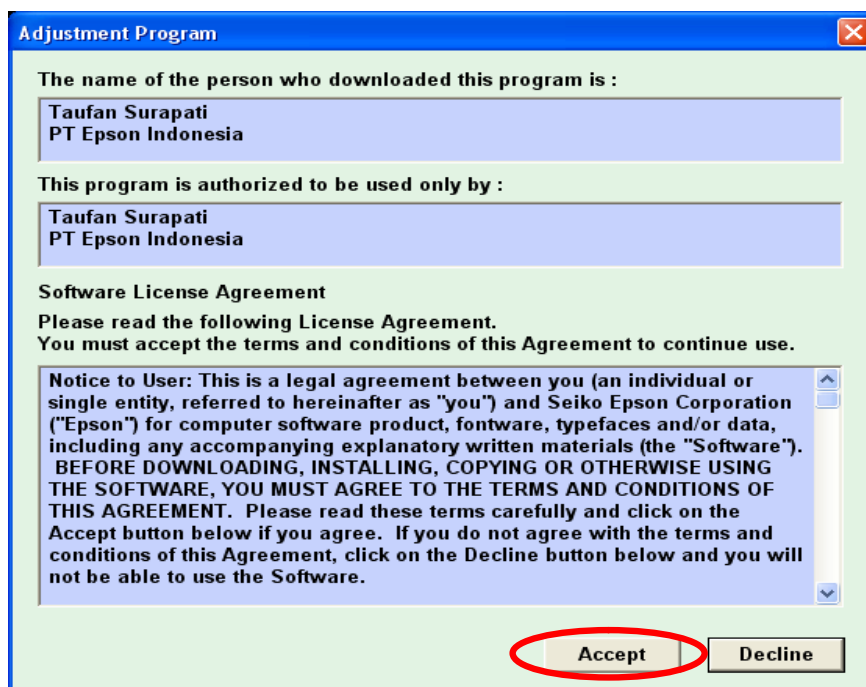


Click on the “Particular adjustment mode” button

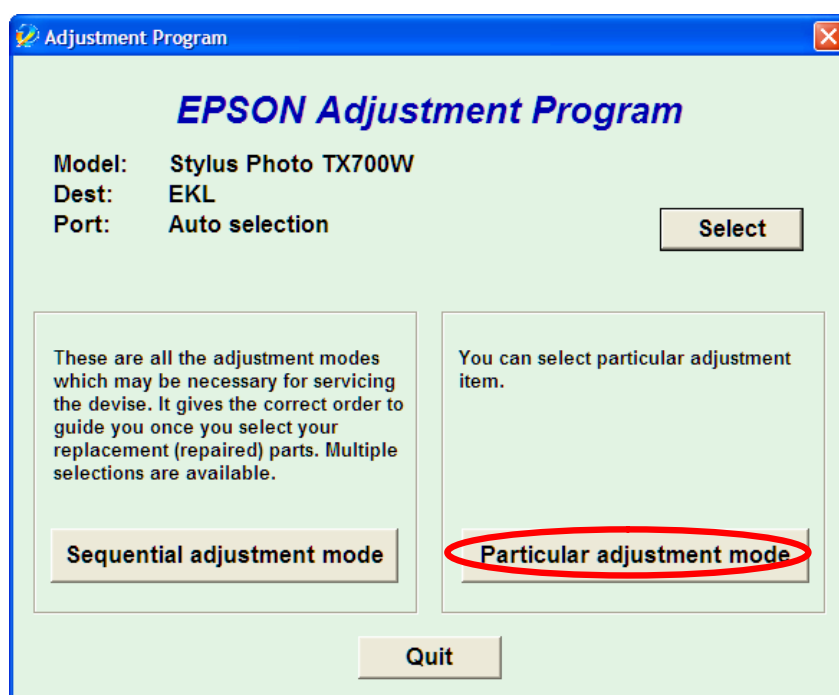


Select the option “**Consumables maintenance counter**”
Then click on “**OK**”:

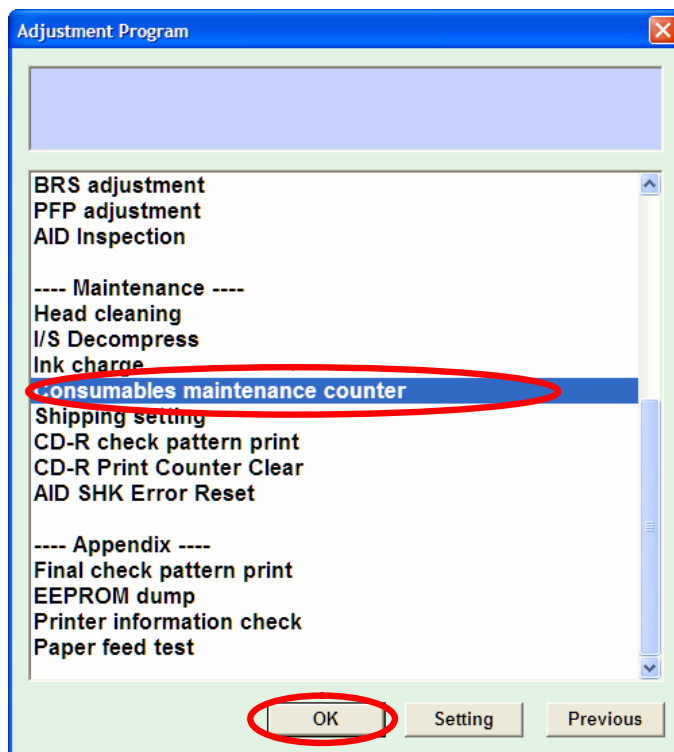

Tick/Select the "Main Pad countre" and "Platen pad counter" boxes
then click on “check” to get the current counter information
Now tick/select the same items and click on the “Initialization” button

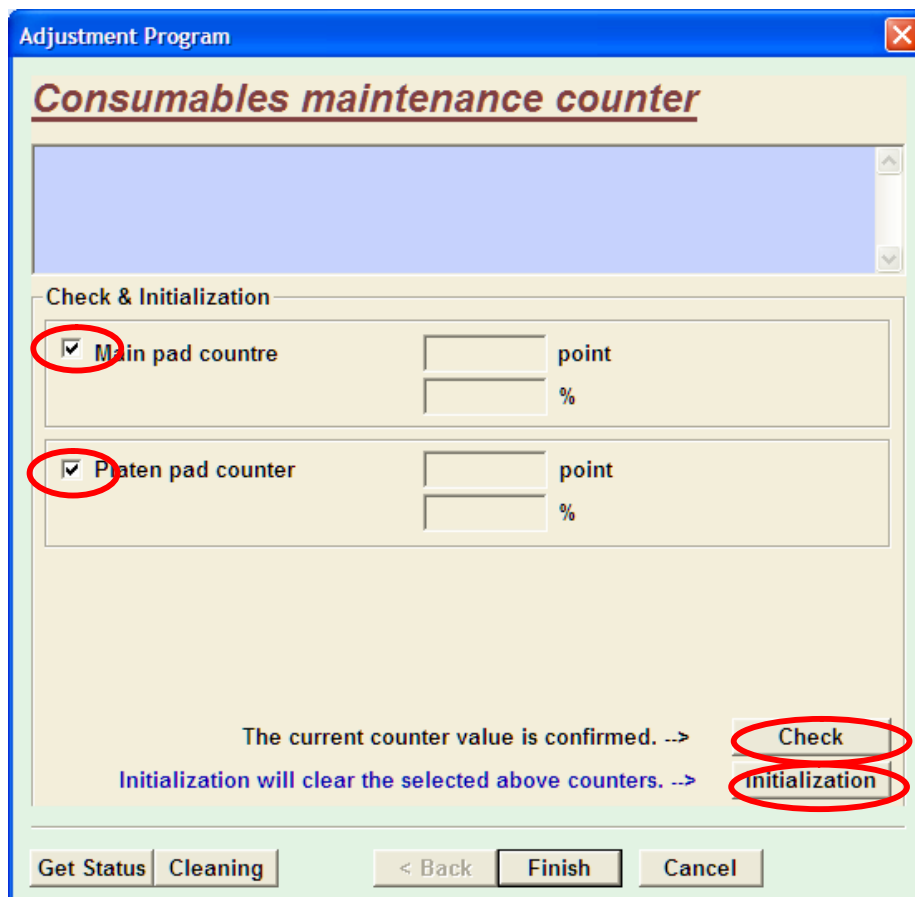

Click the “**Aceptar**” or "Accept" button to reset the counters.

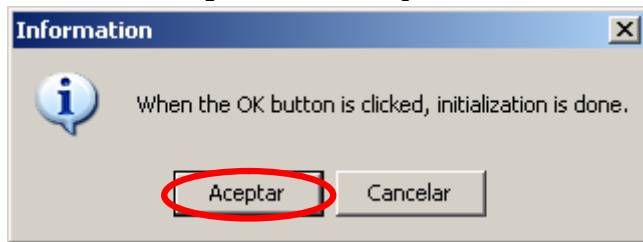


That's it...

You now switch the printer off and then on again.

To exit the reset utility you now click on "Finish"

Now click on the “Previous” button

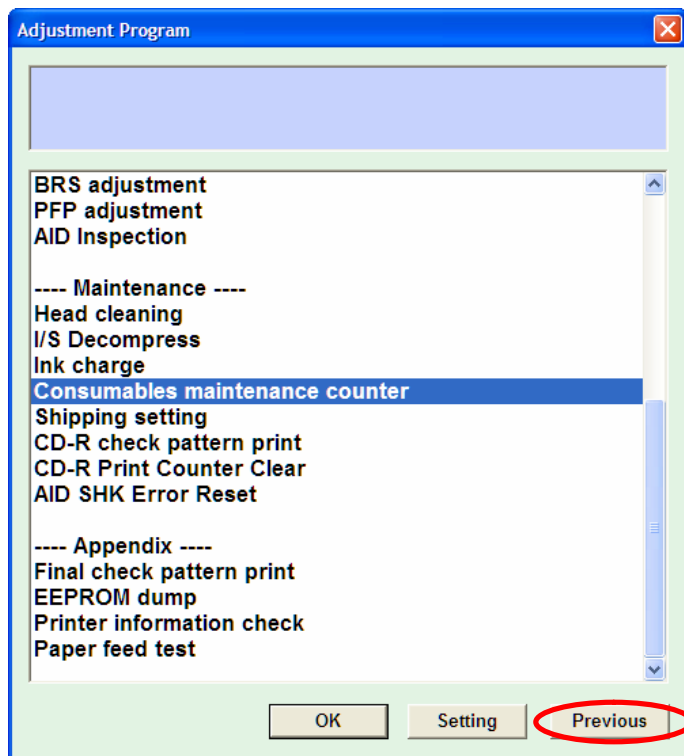

And finally... Click on “Quit”

